




# Sizing Guide for Mercer Cut Resistant Gloves including MercerMax®, MercerGuard® and Millennia® Brands.

Proper fit ensures safety, comfort and longer service life. Workers are more apt to wear gloves if they fit properly. Gloves should be snug but not too tight. Fingers should go all the way to the end of the glove fingers. **Applicable to item numbers M33411, M33412, M33413, and M33415.**

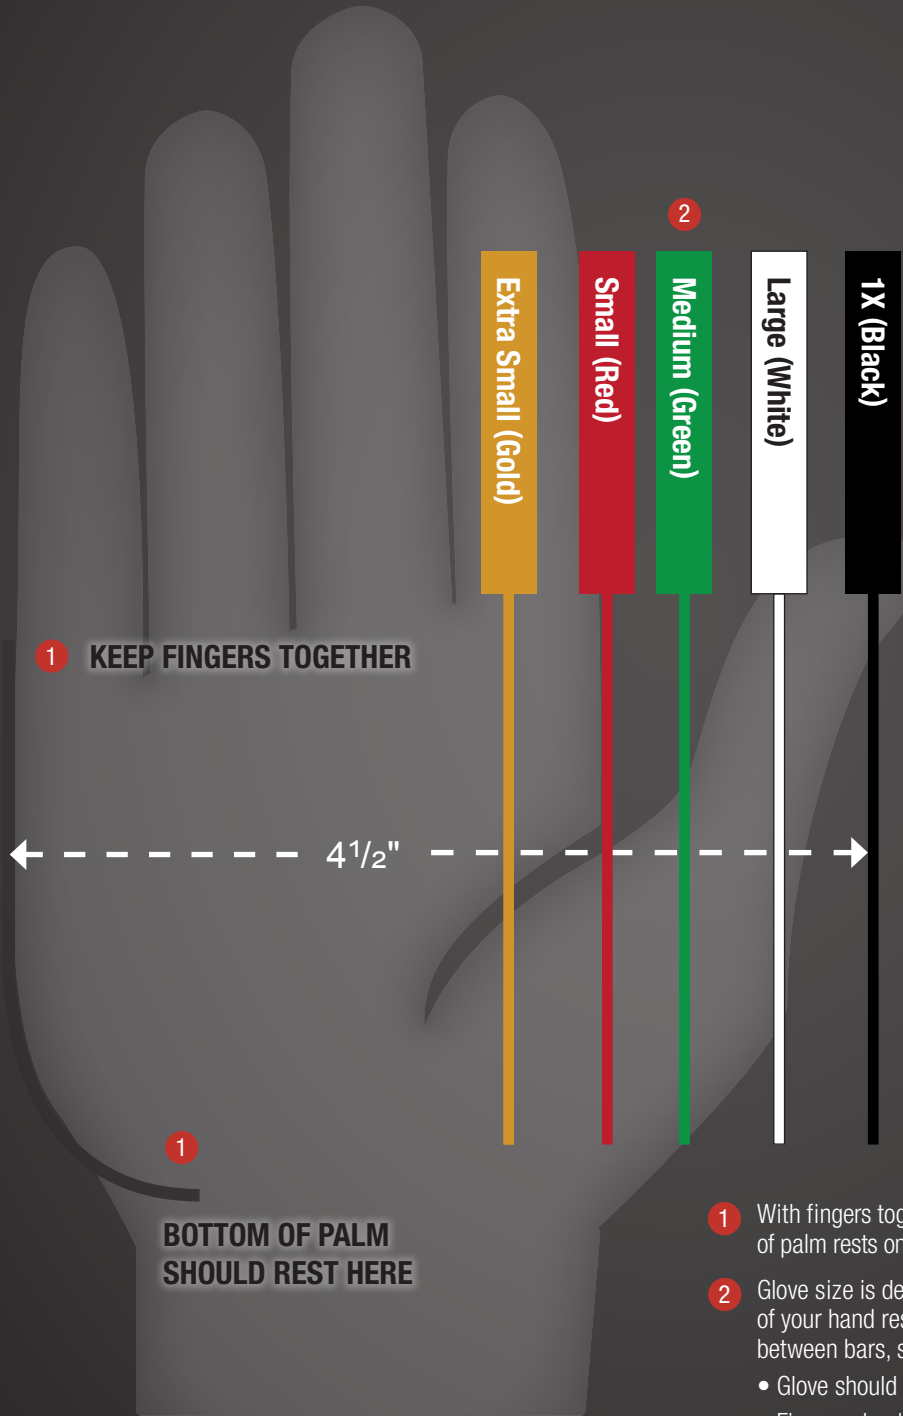

1 KEEP FINGERS TOGETHER


4 1/2"

1  
BOTTOM OF PALM SHOULD REST HERE

2

- Extra Small (Gold)
- Small (Red)
- Medium (Green)
- Large (White)
- 1X (Black)

NOTE: DRAWING IS TO SCALE.  
For proper scale: On the drawing, the space between the left side of the hand and the 1X size line is 4 1/2"



Gloves should be cleaned and sanitized regularly

MercerMax®, MercerGuard® are **MADE IN USA**

- 1 With fingers together, place hand so that left side of hand and bottom of palm rests on black line.
- 2 Glove size is determined by the color bar where the right side of your hand rests (excluding thumb). If the side of your hand falls between bars, select smaller size.
  - Glove should be snug, not tight.
  - Fingers should reach completely to the end.